


# AcuPower-5A Camera Power Supply User Manual

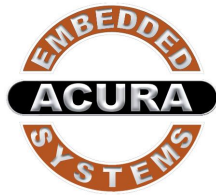

**Acura**  
**Embedded Systems Inc.**

# AcuPower-5A Camera Power Supply User Manual

**AcuPower-5A** camera power supply consists of two parts which are supply case and input/ output cable as following **Figure 01**. It is convenient, portal and special for security camera.



**Figure 01**


### AcuPower-5A Feature

Back side



Power cable connector  
(Male side)

Front side

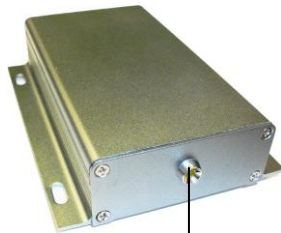

signal light

### AcuPower-5A Size


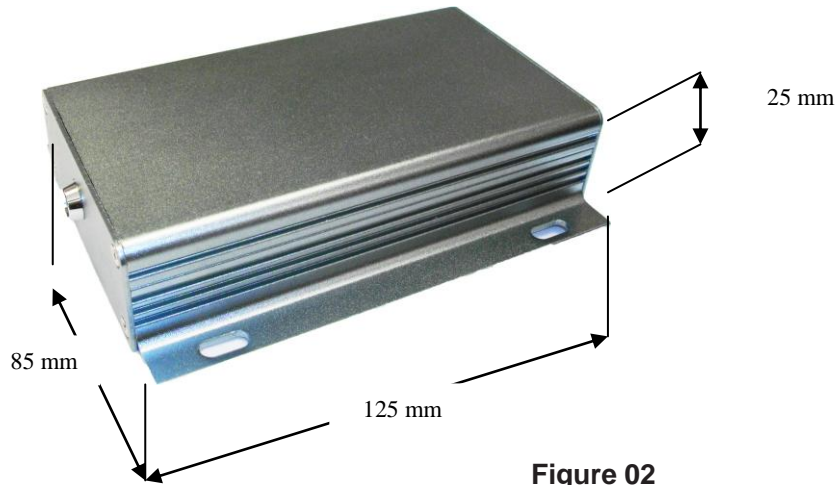



Figure 02

### Input / Output Cable Settings

AcuPower-5A's Input: 8 – 30 V  
Output: 12V DC 5A

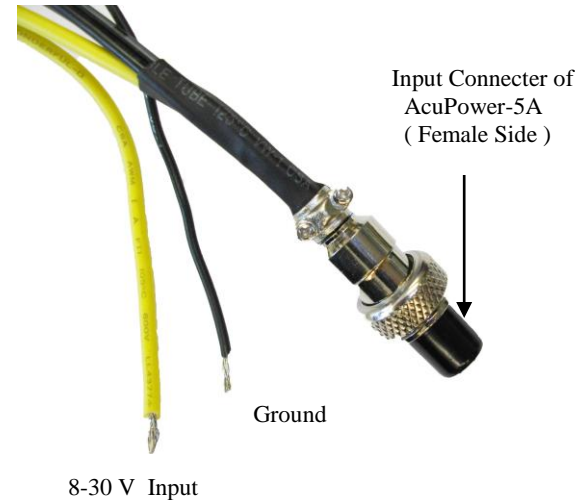

8-30 V Input

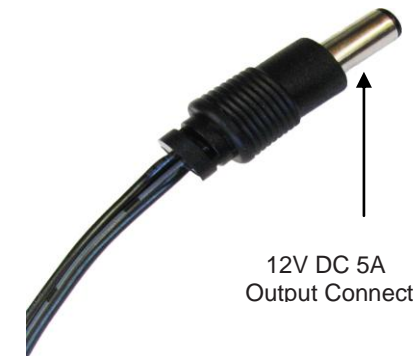

12V DC 5A  
Output Connect

Figure 03

### Input / Output Cable Connection

Figure 04 will show connector pins with female side in detail.

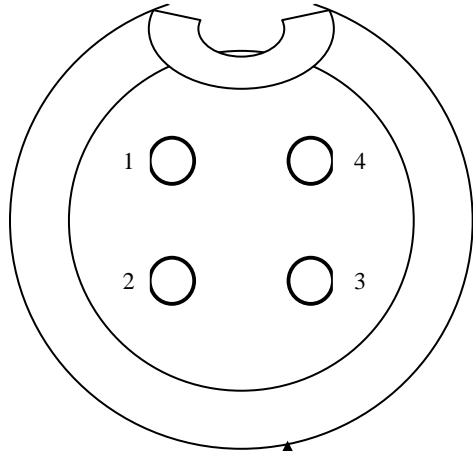


Figure 04



**Input Pins:**

PIN 1 ----> + 8 ~ +30 V  
 PIN 2 ----> Ground

**Output Pins :**

PIN 3 -----> + 12 V DC  
 PIN 4 -----> Ground

### AcuPower-5A and Cable link

After checked input / output pins, you can connect and tight screw nut of cable as below Figure 05.


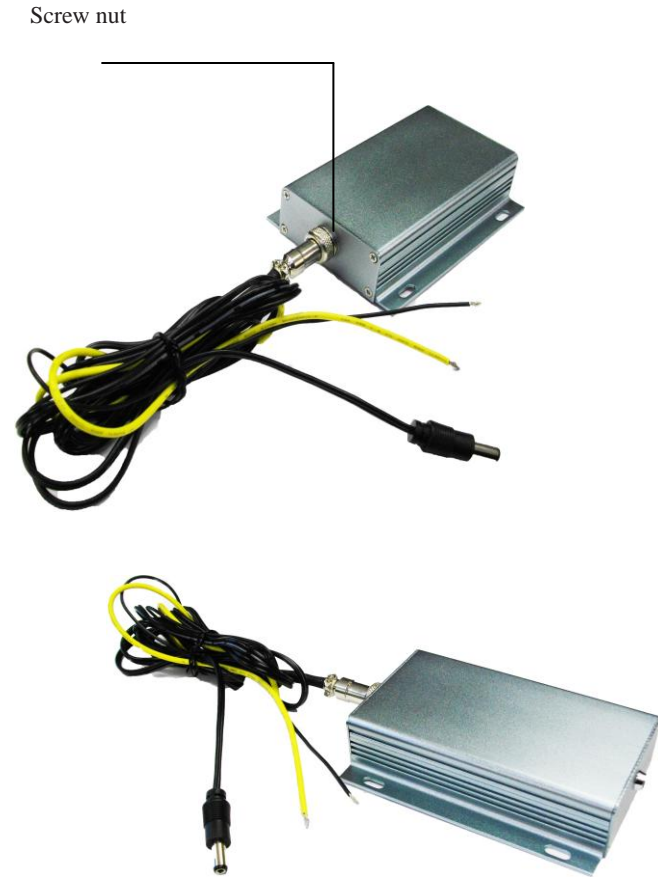


Figure 05

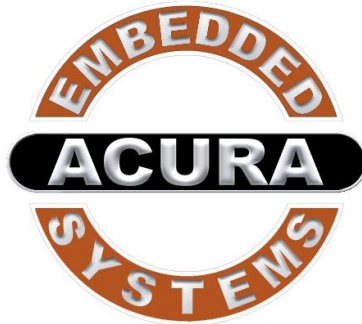

With the unique set of products, Acura Embedded Systems remains committed to its goal of providing trouble-free and customer-friendly service. A special customer service unit has been set up specifically to cater to our esteemed customers' needs.

## Technical Support:

North American **Technical support contact your Salesperson**

Cal USA/CANADA: 1-866-528-2214

AU/NZ: 3 5284 0222    UK: 8453 455 734

[support@acuraembedded.com](mailto:support@acuraembedded.com)

## Mailing address:

### **Acura Embedded Systems Inc.**

Unit #1, 7711-128th Street, Surrey, BC V3W 4E6, CANADA

**Ph: (604) 502-9666    Fax: (604) 502-9668**

**Toll Free 1-866-502-9666**